

т	A /	W	1	
_	w	I X	N1	

Transmission Measurement Device

System-Features

- accurate measuring
- repeatable measurements
- battery powered
- light and portable

Advantages

- compact design
- very user friendly
- short start-up time
- fast calibration

ISweek www.isweek.cn

公司名: 深圳市工采网络科技有限公司

电话: +86-755-83289036

地址: 广东省深圳市南山区高新南一道中国科技开发院3号楼16层

传真: +86-755-83289052

邮箱; sales@isweek.cn

Transmission device TMX01

The mobile transmission analysis instrument TMX01 is made for optimising design work and control of water treatment systems. With this unit, water samples can be evaluated according to DIN 38404. A fluid sample can be taken and its transmittance measured.

The TMX01 can also be used for regular inspections and analysis of water quality.

Features

This instrument comes in a robust Aluminium suitcase, giving maximum protection against impact.

The unit is battery powered and operates with just four buttons. This meter can be operated very easily and can be always ready for use. A removable charger takes care of power which is included with the instrument.


Technical Data

Cover	Aluminium suitcase	
Dimensions (WxHxD)	370 x 330 x 150 [mm]	
Weight	3,0 kg	
Power supply	Battery driven, 4x NiMH-accu, each 1.500 mA	
Operation time	approx. 2,5 hours	
Measuring accuracy	± 0,5%	
Ramp-up time	max. 30 seconds	
Temperature range	0-30°C	
Display	4 lines	
Scope of delivery	Suitcase with unit Quartz-cuvette 10 mm 4x NiMH rechargeable batt. Recharger for accu (230 V)	

Measuring

There is a light protection cover above the measuring unit, so the influence of sun radiation is completely prevented. This means that reproducible measurement results are guaranteed. The measuring process starts automatically and the display shows the metered transmittance in %.

Based on the transmittance measurement, the unit gives an indication as to whether additional water treatment processes need to be installed. In the event of a failure, a message will appear on the display.

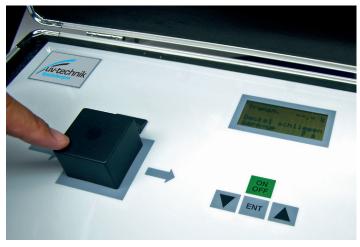

Example of use

Calibration

The reference of the transmission device is completed using distilled water. The fast calibration just takes a few seconds and is based on the short warm-up time of the TMX01.

An integral micro-controller saves the measurement even when the unit is switched off as well as during battery exchange.



ISweek www.isweek.cn

公司名: 深圳市工采网络科技有限公司

电话: +86-755-83289036

地址: 广东省深圳市南山区高新南一道中国科技开发院3号楼16层

传真: +86-755-83289052

邮箱: sales@isweek.cn